



425-6636 '11+ Charger Contour Console


Installation Instructions



Remove forward OEM console plastic cover, then remove (1) 10 mm flange nut from center of plastic console. Nut will be re-used.




With both hands, grasp the plastic OEM console on both sides and pull directly rearward to release.

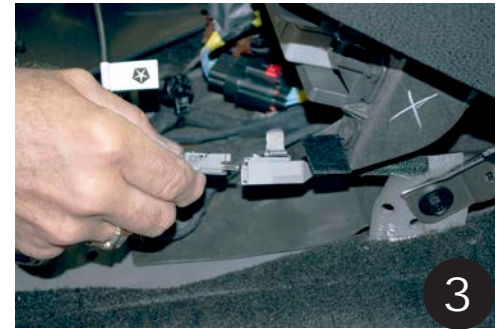

Disconnect USB connector from harness. Remove Ignition Proximity Sensor from plastic OEM console. Ignition Proximity Sensor will be remounted into Jotto Desk Contour Console.

Disconnect 12v socket wire harness assembly from underside of plastic OEM console. Pop out AUX socket from center of plastic OEM console.

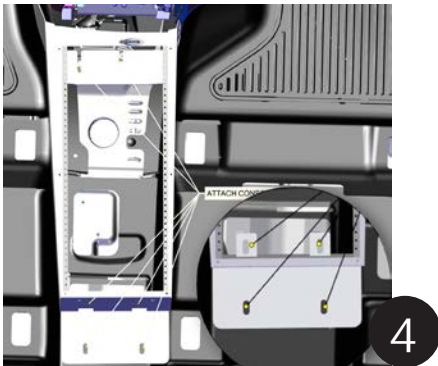


Secure top of console by using (2) M6-1.0 hex flange nuts.

Secure bottom of console with (2) 1/4" washers and 1/4 self-tapping screws.



Relocate the Proximity Sensor to the mounting studs on the Jotto Desk Contour Console. Use the provided 8-32 nylon washers and place between console and sensor.

You can now relocate the OEM 12V outlets and USB hub into the console.

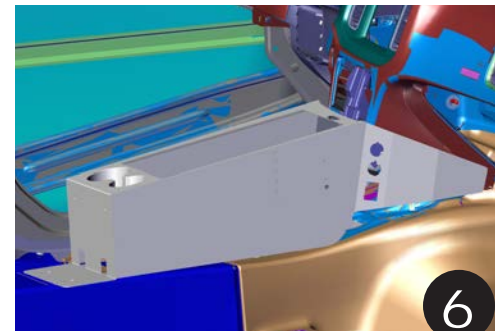

Console can now be adjusted forward and up to ensure a tight fit/finish with the OEM dash structure.

NOTE: Due to the remote starting feature of this vehicle and the variations in equipment that mounts in the console, we have found that in rare instances the vehicle will not start as planned. If this occurs, it may be necessary to re-locate the sensor to a new **location in an effort to reduce the "shielding effect" of the metal console.** Please find a suitable location under the dash that will protect the sensor from damage and secure it using nylon ties.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886



209 W. EASY ST., ROGERS, AR 72756 • www.EVERYTHINGBUTLIGHTS.com • 11/17

Jotto Desk® is a patented product and Registered Trademark of Assembled Products™ Corporation. Contour Console™ has design and utility patents. Additional Patents Pending. Specifications subject to change without notice.