



CONTOUR CONSOLE


CHEVROLET SILVERADO SSV 2019-2022 & CUSTOM TRAIL BOSS/WT 2023+

Installation Instructions

425-6662




1. Remove 7 mm screw located on the driver side lower trim.

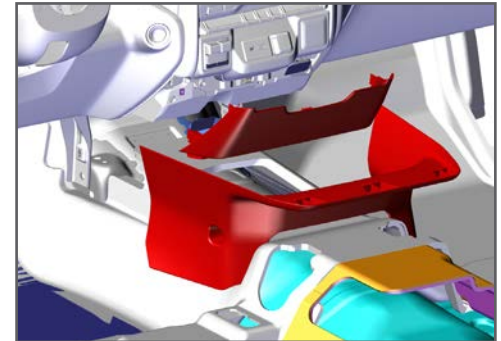


2. Remove lower trim followed by the upper trim by pulling on the corners to unclip them from the dash.



3. Attach the Lower Left and Lower Right Support Brackets to the OEM studs located by the main center dash supports. Loosely secure with provided flange nuts.

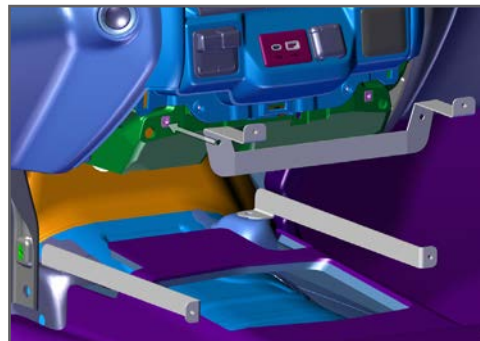

4. Attach the Upper Bracket to the dash with provided M4.2 x 1.41 x 2.0 screws. Tighten into place.

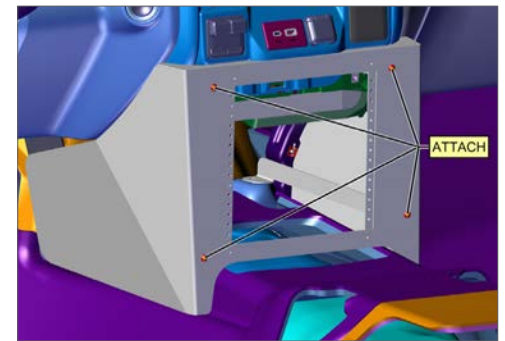

5. Place the Console into the vehicle. Secure in place by attaching the (4) provided screws through the front of the console and attaching to the previously installed Lower and Upper Brackets. Tighten flange nuts on Lower Support Brackets to complete installation.

If you have questions or need further assistance please call Technical Support: 1.877.455.6886

209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 12/23



Jotto Desk™ is a patented product and Registered Trademark of Assembled Products™ Corporation.
Specifications subject to change without notice.